 
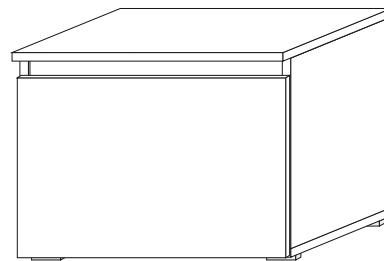 


SZAFKA 50

 
 
 
 

 
 
 
 
 
 






(PL) Instrukcja montażu
 (D) Aufbauanleitung
 (GB) Assembly instruction
 (SK) Návod na montáž













Karta gwarancyjna
 der Garantieschein
 Guarantee certificate
 Záručný list

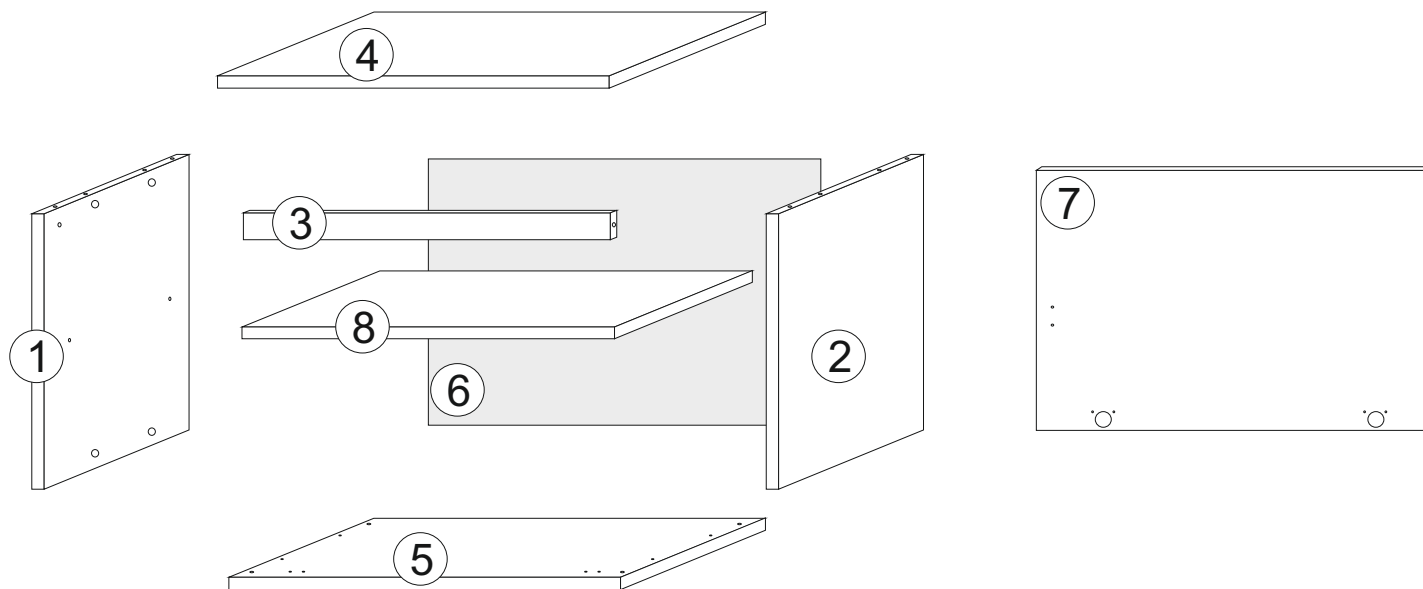


Akcesoria - Accessories - die Accessoires

B  x10	C  x8	D  x8	W1 3.5x16  x9	W3 3.5x25  x8
J  x4	E1  x2	E2  x2	G 	N  x4
KI  x1				

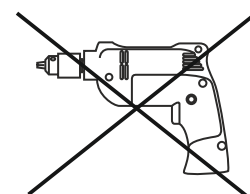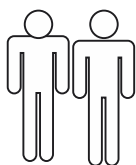   
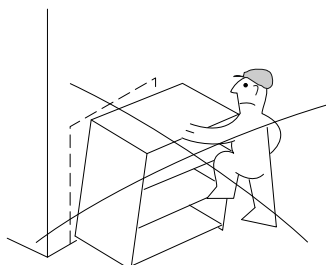 


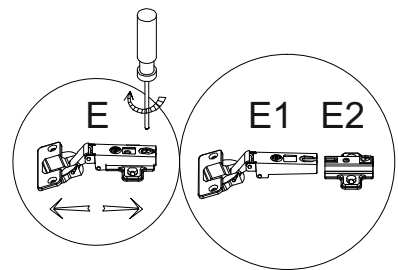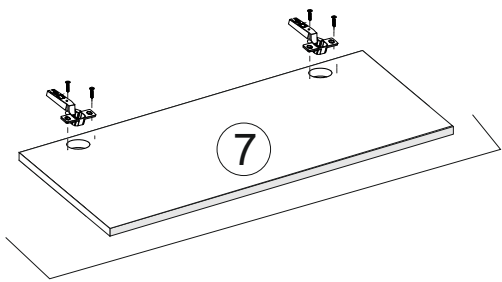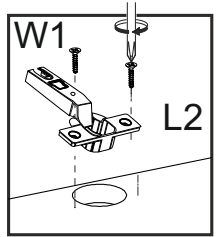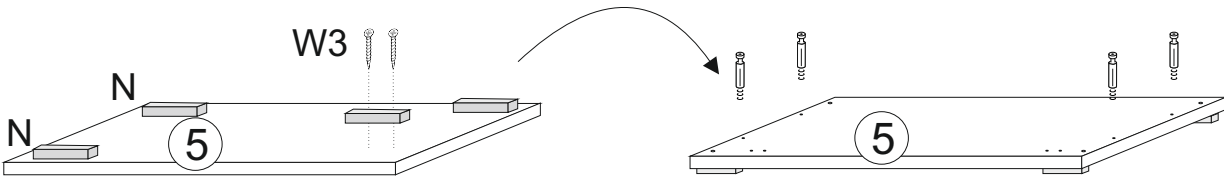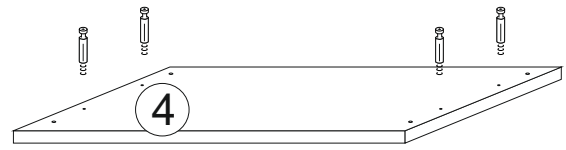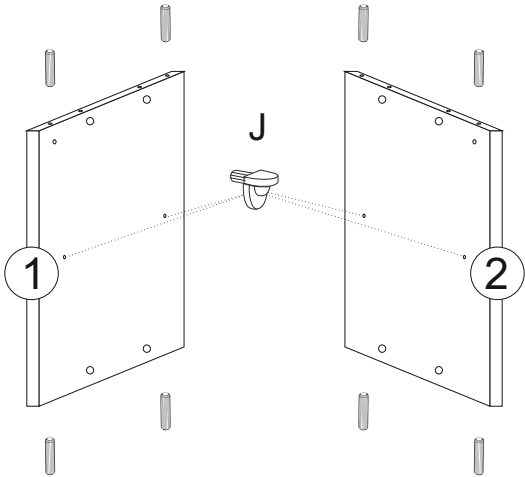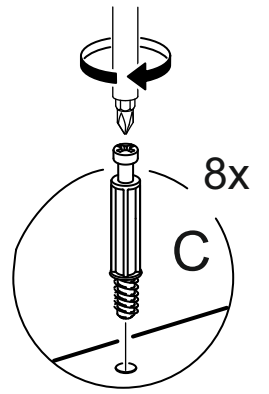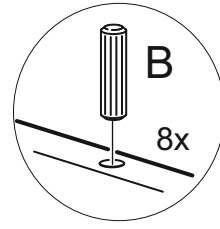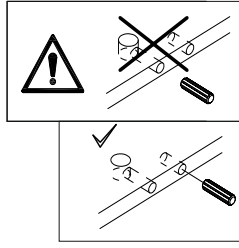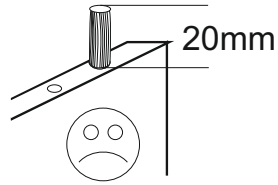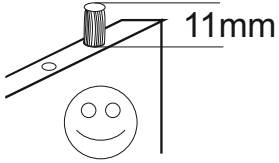            




II

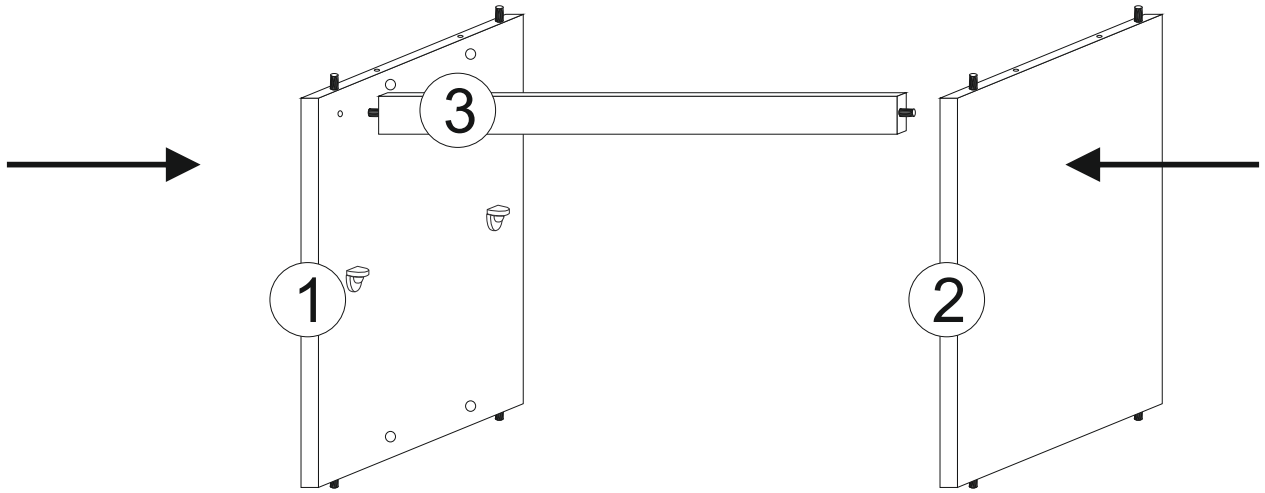 



III

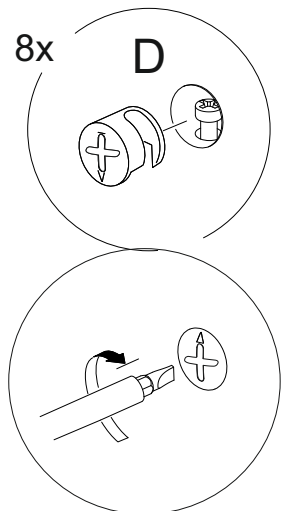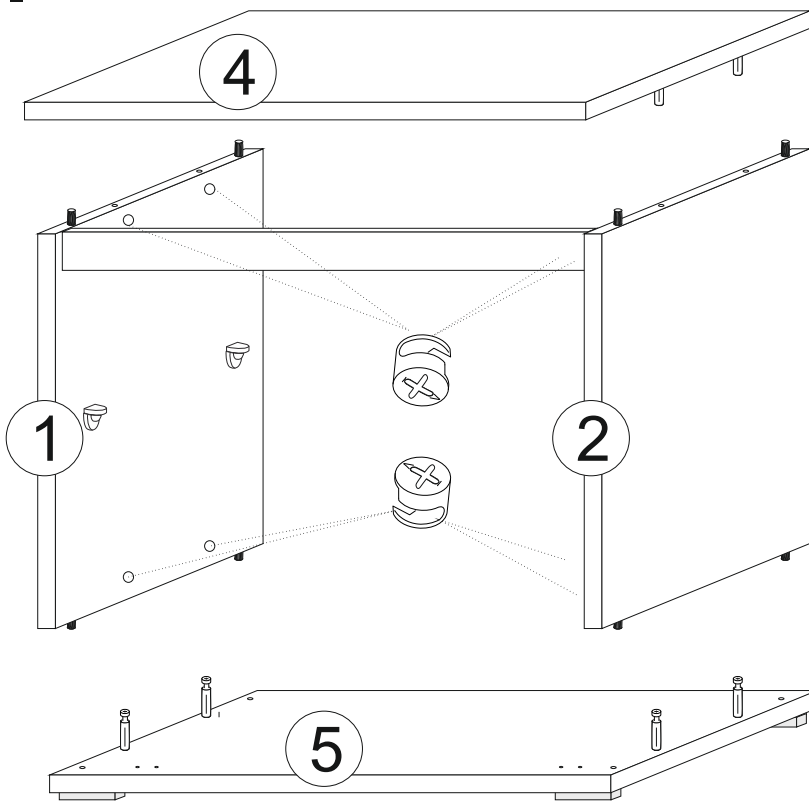  







IV

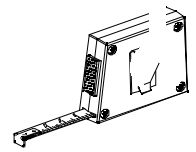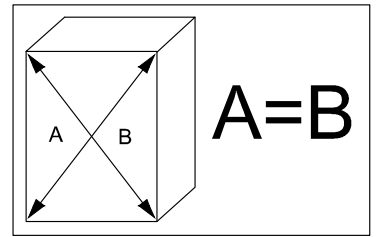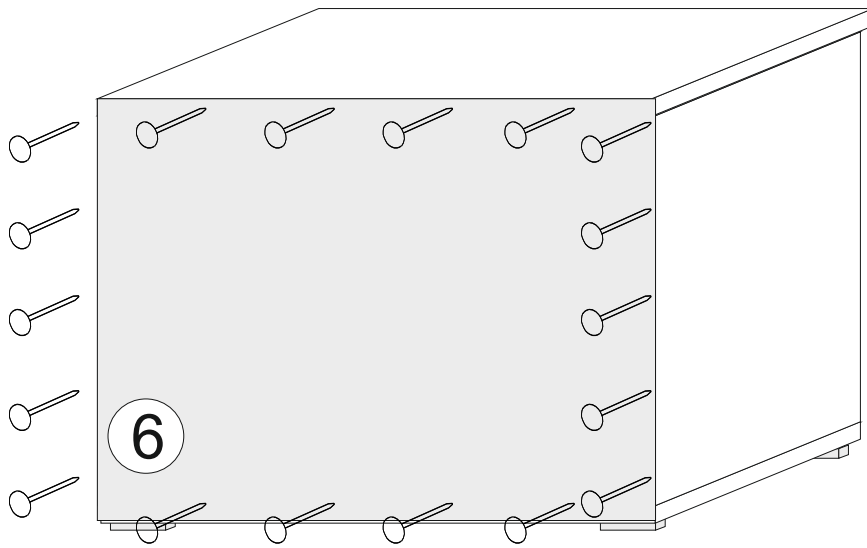   

V

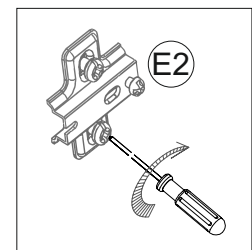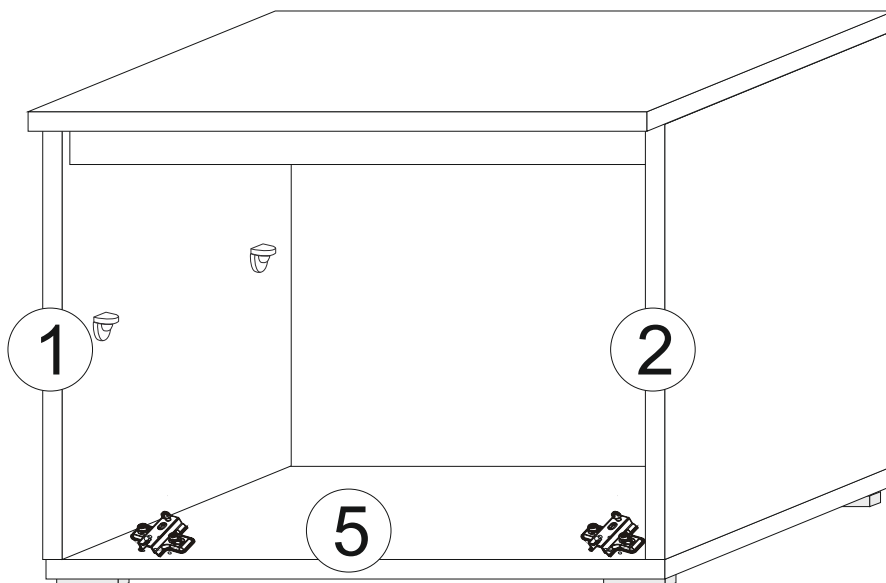  

VI

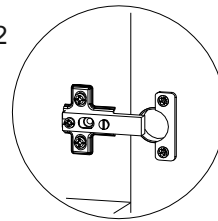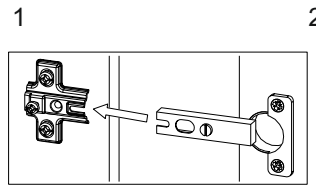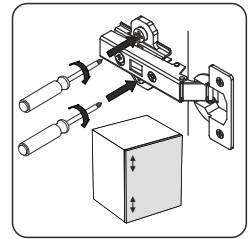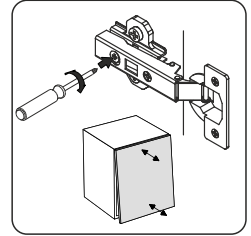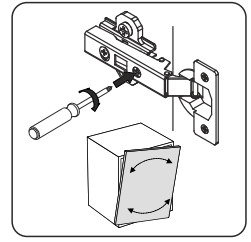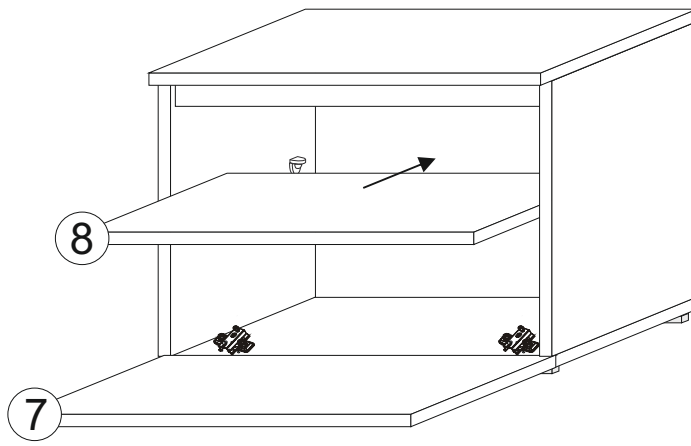      

VII

